

# Adjustable Seat Supplementary Manual

## Adjustable Seat Assembly



1. Remove screw from rear axle



3. Place washer and nut into position



2. Adjust the adjustable bar to desired height



4. Place nut into position and tighten with a wrench

## Seat Assembly



1. Remove screw from adjustable bar



3. Screw the bolt into nut



2. Adjust seat to desired height and slide washer and screw back in



4. Tighten with screw driver while holding nut still with a wrench

## Adjust the seat height



There are three holes on the top and four on the bottom of the adjustable bar to adjust the seat.

