

GARAGE TENT ASSEMBLY INSTRUCTIONS

⚠ WARNING:

- Assembly instructions must be followed.
- Assembly must be completed by an adult.
- We recommend two or more adults when assembling.
- Do not assemble tent in windy conditions.
- Keep children and pets away from assembly area.
- This package contains small parts and plastics bags that should be kept away from children.
- Install tent on a flat, steady and safe surface.
- Ensure that all connectors & poles are firmly secured in position fully.
- It is important to do so before use so as to avoid collapsing or damage to the item, which could result in injury.
- Do not leave tent assembled when there is a risk of high wind, as conditions may damage the structure or cause serious injury.
- Do not climb on top of the tent, the structure is not strong enough to support excess weight.

CARING FOR YOUR PROUDCT

- This tent is not a permanent structure and should be disassembled and stored away when not in use.
- Do not repack your tent until it is complete dry.
- To clean, wipe with a damp cloth.

⚠ WARNING:


KEEP AWAY FROM FIRE.
ITEM IS NOT FIREPROOF.
KEEP ALL FLAME AND
HEAT SOURCES AWAY
FROM THIS PRODUCT.

⚠ WARNING:

NOT SUITABLE FOR CHILDREN
UNDER 36 MONTHS, DUE TO
SMALL COMPONENTS WHICH
MAY POSE A CHOKING HAZARD.

⚠ WARNING:


THIS MANUAL CONTAINS IMPORTANT SAFETY,
ASSEMBLY INFORMATION, KEEP THIS MANUAL
FOR FUTURE REFERENCE.

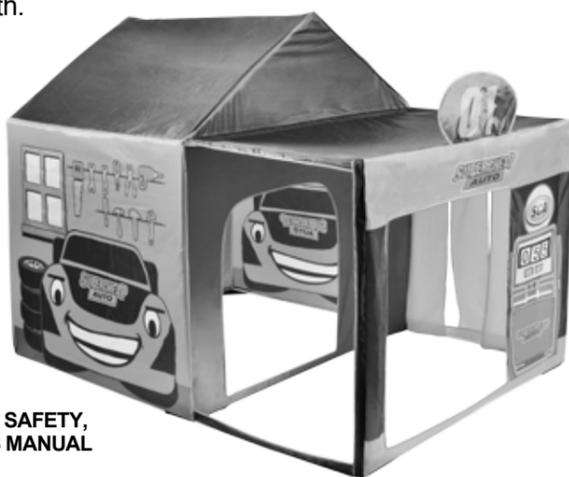

MANUFACTURED AND PACKAGED FOR
SRGS PTY LTD
ABN 23 113 230 050
751 GYMPIE ROAD, LAWNTON, QUEENSLAND 4501, AUSTRALIA

1

PARTS LIST

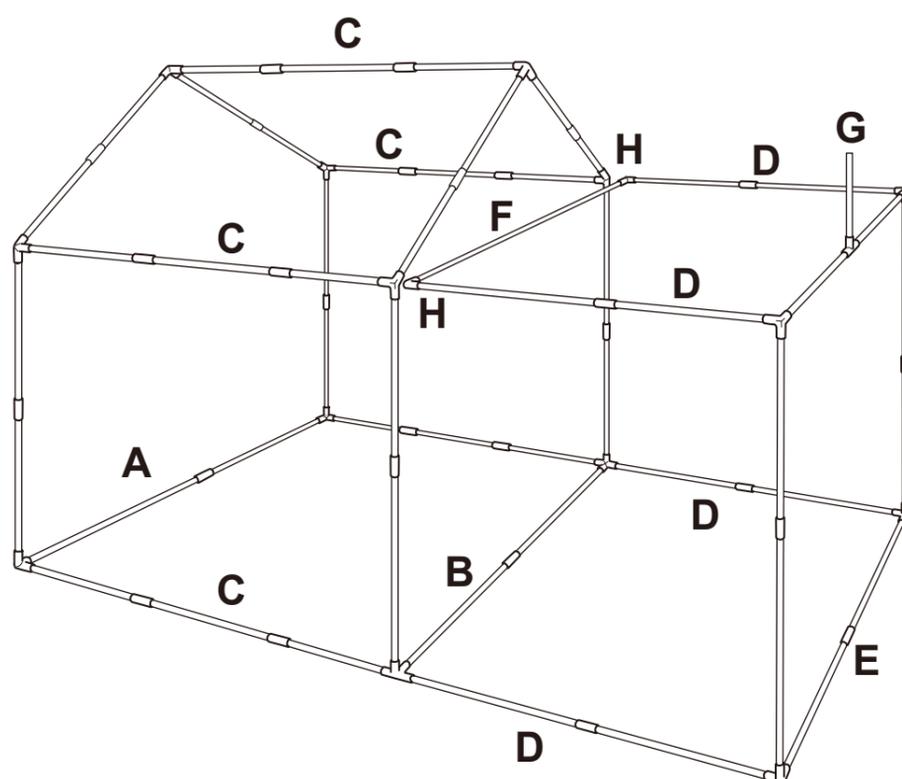


Part list:

Part No	Spec	QTY
A	pentagon frame #1	1
B	pentagon frame #2	1
C	connector pole 117.5cm	5
D	connector pole 77cm	4
E	square frame	1
F	connector pole 106cm	1
G	connector pole 21cm	1
H	L shape joint	2
I	cover	1

2

ASSEMBLY INSTRUCTIONS

STEP1:

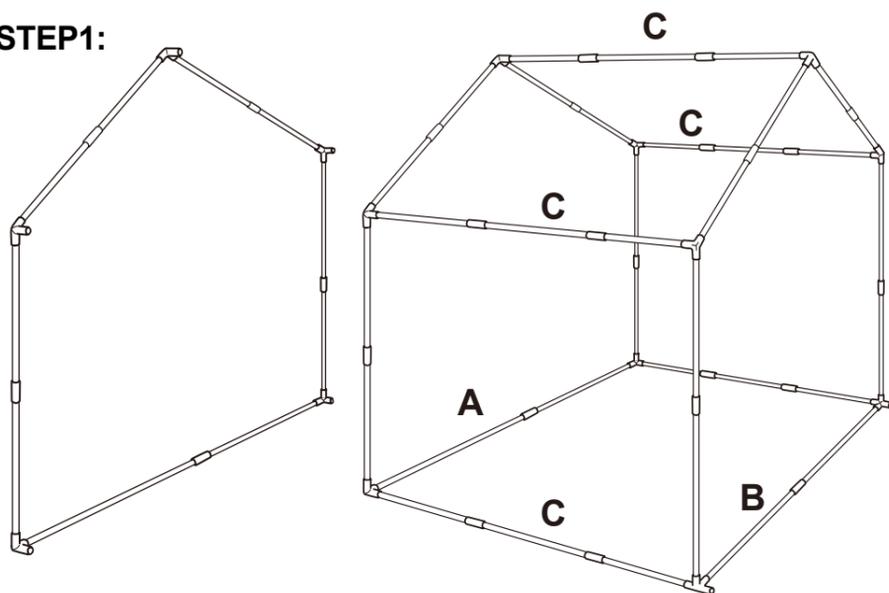

Assemble the pentagon frame **A** by slotting the plastic poles into the plastic joins. Ensure the three prong joins in the corner are all pointing the same direction. Assemble the pentagon frame **B** by slotting the plastic poles into the joins. There are **3x** three prong joins and **2x** four prong joins in this frame. Ensure the three prong joins are pointing the same direction. Stand frame A on the floor with the base laying on the ground. The floor is the flat side opposite of the triangle join. Insert a 117.5cm connector pole (**C**) into the bottom two joins, then insert the other end of the connector pole into the corresponding bottom joins on frame **B**. Connect the top three 117.5cm connector poles on the top of the pentagon frames to complete the structure.

STEP2:

Put the fabric cover (**I**) on top of the finished frame. Make sure the fabric cover wraps under the bottom poles. Ensure the excess fabric for the carport is on the frame B side, so that the extra prong on the bottom of the frame can be placed into the fabric pocket on the base of the cover.


3

ASSEMBLY INSTRUCTIONS

STEP3:

Insert the 77cm connector poles (**D**) into the two prongs on frame **B**. Assemble the square frame **E** by inserting the plastic poles into the three prong joins. Make sure the third prong on the joins are facing the same direction. Hold the square frame **E** upright and connect the bottom joins with the 77cm connector poles. (The bottom of the frame will not have the T join in the middle) Insert the 21cm pole (**G**) into the T join on the top of the square frame **E**.

STEP4:

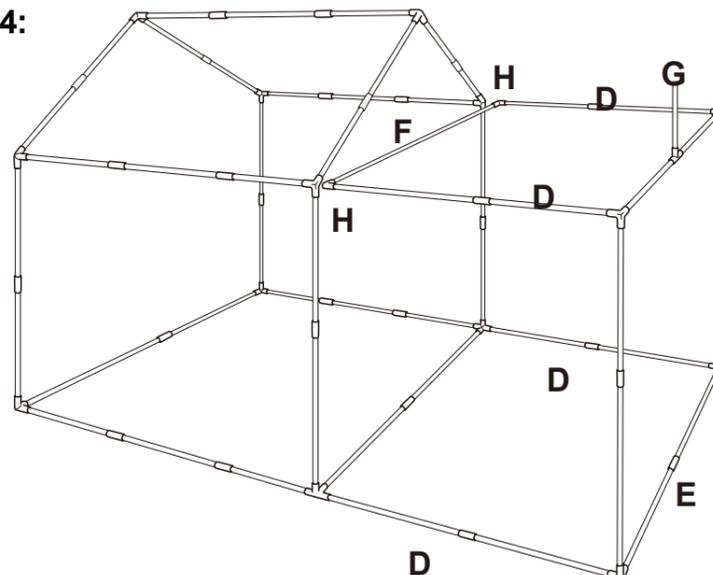

Insert 2x 77cm connector poles (**D**) onto the extra prong on the top corner joins of the square frame **E**. Insert the L shape joints (**H**) on the opposite end of the 77cm connector poles (**D**), ensuring they are pointing to each other. Insert the 106cm connector pole (**F**) into the sleeve on the inside of the carport. Join the 106cm connector pole (**F**) onto the L shape joints. Fold the carport cover over the top of the carport frame. Place the 21cm connector pole (**G**) into the pocket for the "01" sign. Wrap the carport cover around the frame, ensuring the corners wrap under the bottom of the poles.

4